



REV	DESCRIPTION	DATE	BY
P1	Making sketch for the prototype build plan	2026-10-01	AC

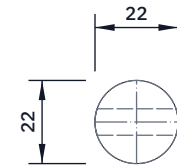

TOP VIEW

Scale 1:2; looking down (along -Z)

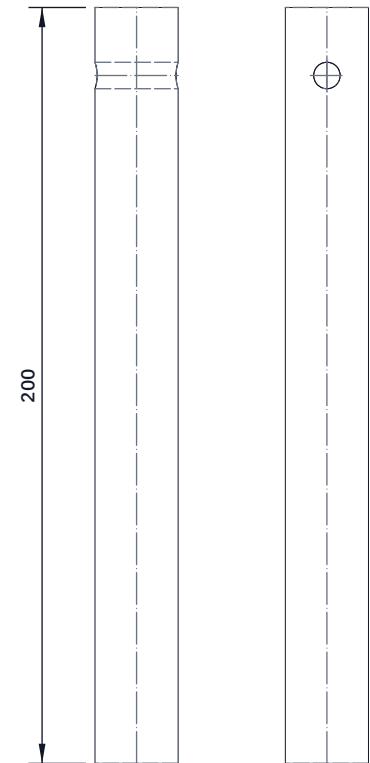

FRONT VIEW

Scale 1:2; looking at the front (along +Y)

RIGHT VIEW

Scale 1:2; looking at the right side (along -X)



WHERE IT GOES

This part in colour, its neighbours in grey

HOW TO MAKE IT AND HOW IT FITS

Buy 22 mm ground rod, f7 tolerance, 200 mm long.
Chamfer the tip 0.5 mm; the tip face stays flat and square.
Drill a 7 mm cross hole 18 mm below the top end, through the centre;
the 6 mm ball-lock pin passes through it with 1 mm of play, so the
plunger can float in line with the bore.
Deburr the cross hole so it cannot score the bore.
Fit: the top 30 mm goes into the coupling; the rest runs in the bore
with 0.05 to 0.10 mm diametral clearance and no seal.
Check: measure the rod at three places; 21.95 to 21.98 mm.

MICROMOLD

github.com/BoujeeEnjinia1701/micromold

MicroMold plunger: making sketch

DRAWING NO. MMD-DWG-106			REV P1	SHEET 1 of 1	SIZE ANSI B
SCALE 1:2	UNITS mm	PROJECTION 	DATE 2026-10-01		DRAWN Amish Chadha
MATERIAL / NOTES Ground steel rod 22 mm (f7), bought to length					
Licensed CERN-OHL-S-2.0 · Design Molecule Lab · designmolecule.com				Generated from cad/src; do not edit by hand	